




1 Remove solenoid valve

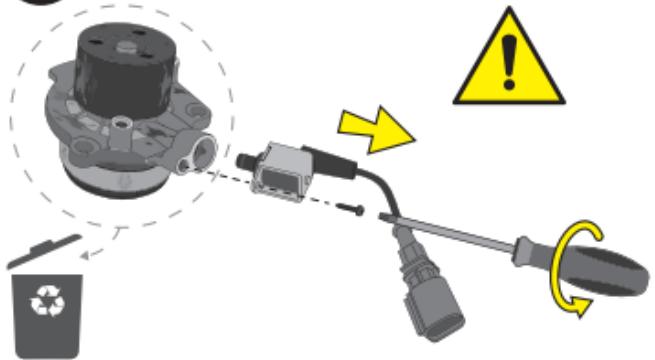


2 Pump with patented system

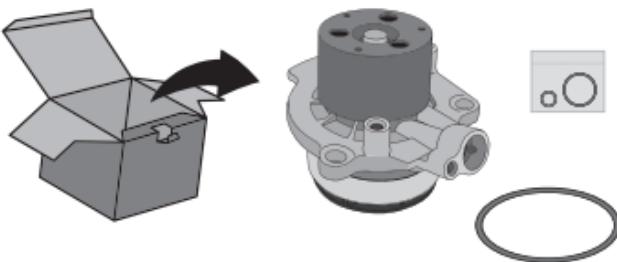

3 Replace O'rings

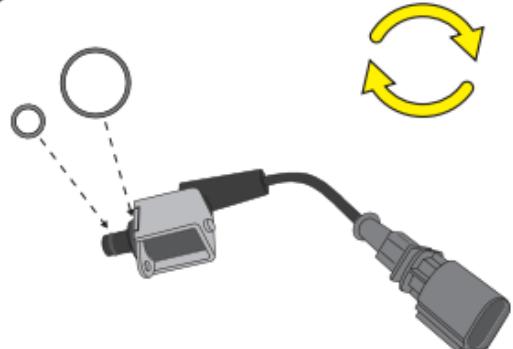

4 Fit solenoid valve in new pump

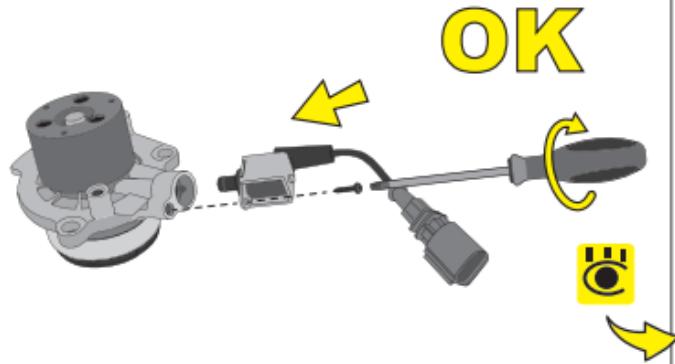



IMPORTANT NOTICE!

Refill the coolant circuit completely with coolant liquid (± 8 liters) before switching on the engine

Failure to do so may result in permanent damage to the coolant pump!

Rellenar el circuito de refrigeración con líquido refrigerante (± 8 litros) antes de encender el motor

¡En caso contrario, puede dañar la bomba de agua de forma permanente!

Füllen Sie den Kühlkreislauf mit Kühlmittel (± 8 Liter), bevor Sie den Motor starten

Nichtbeachtung kann zu dauerhaften Schäden an der Wasserpumpe führen!

Remplir le circuit de refroidissement de liquide de refroidissement (± 8 litres) avant de démarrer le moteur

Dans le cas contraire, vous risquez d'endommager définitivement la pompe à eau!

